



Figure 1: Portable Handheld Computer

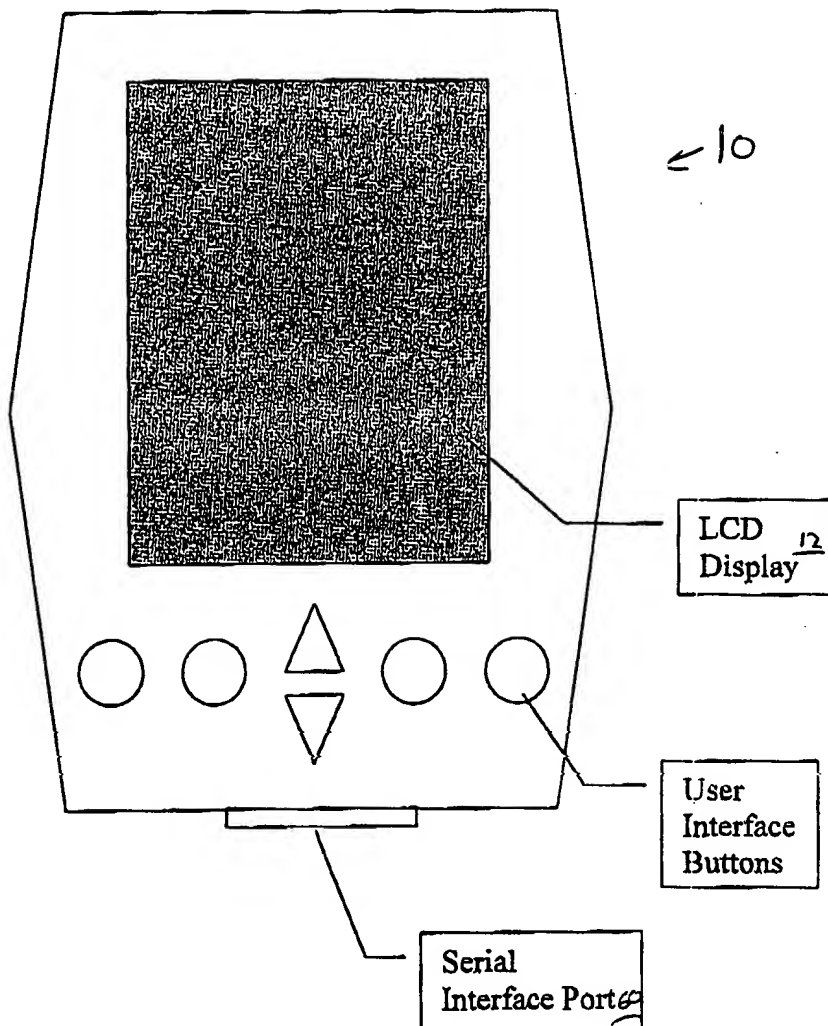


09628506.072800

Figure 2: Visual Campus Database

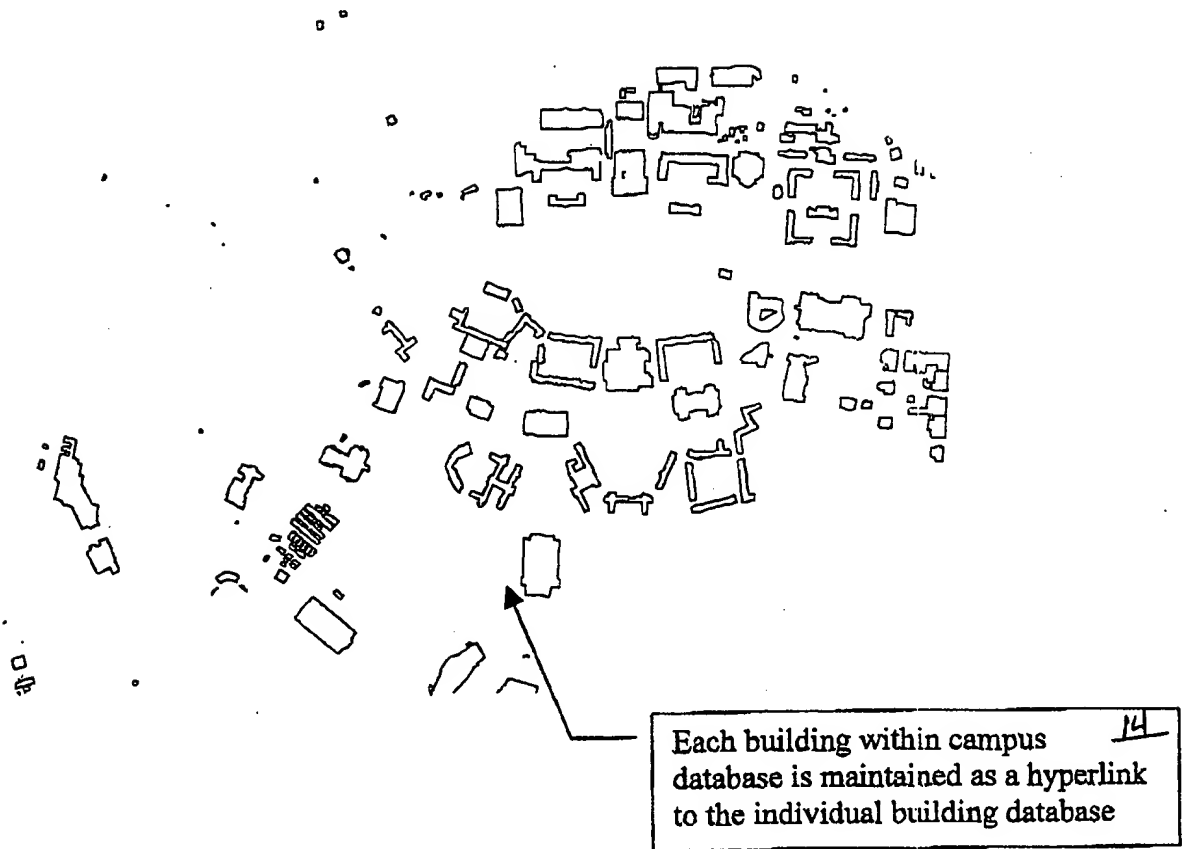


09628506 .072800

Figure 3: Docking Cradle Connection

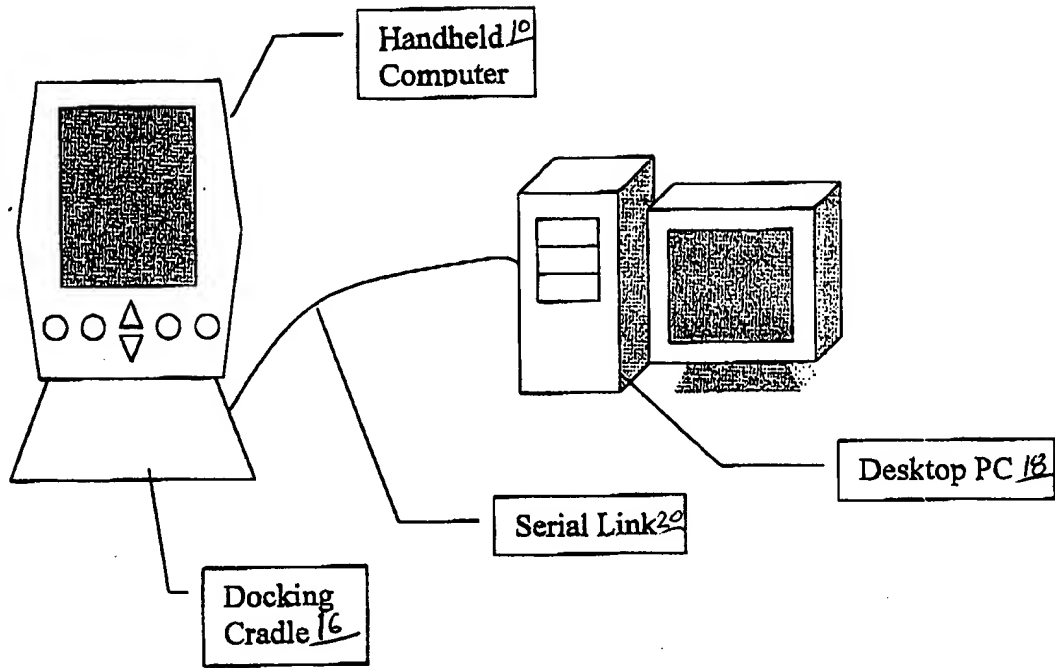


09628506-072800

Figure 4: Information Flow in PalmFielder™

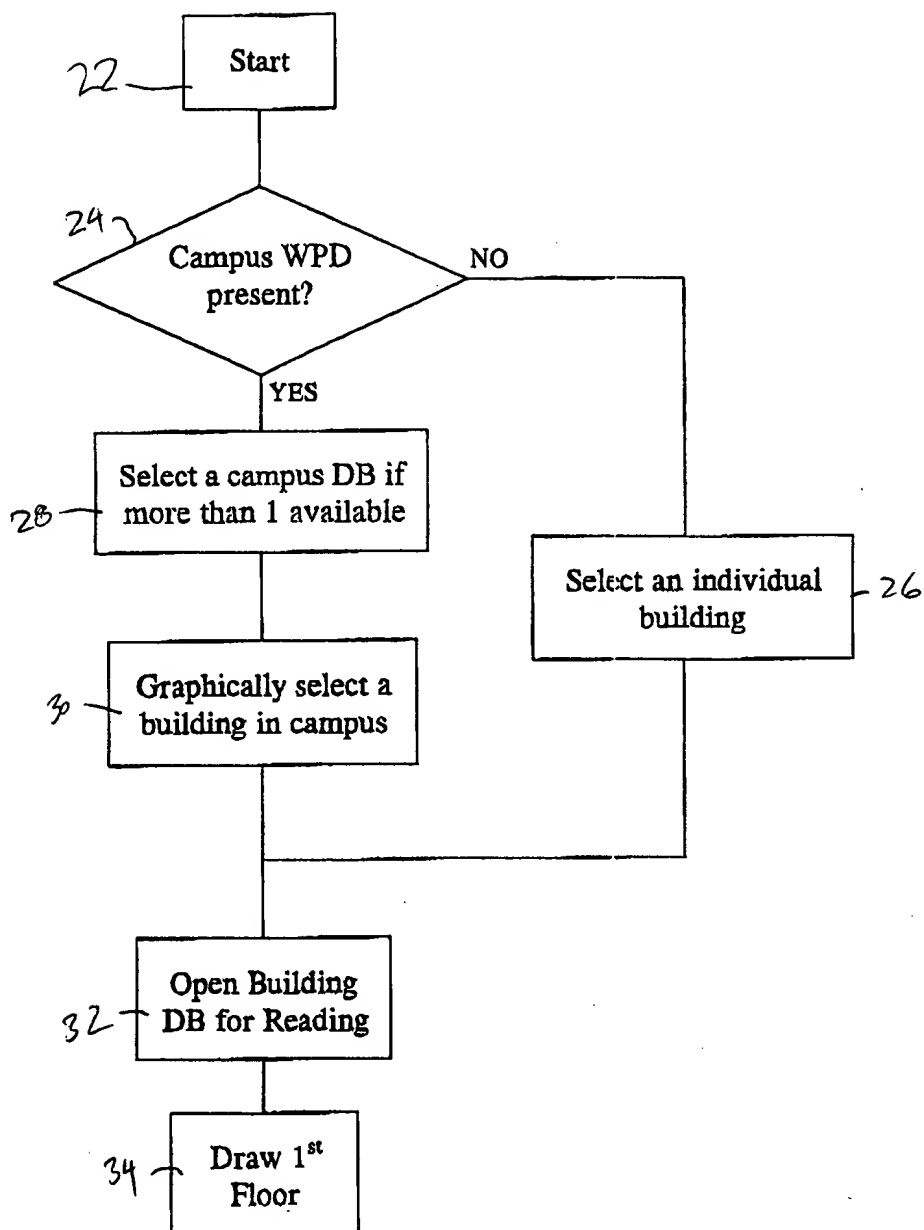

0082090506-072800

Figure 5: Double Buffering

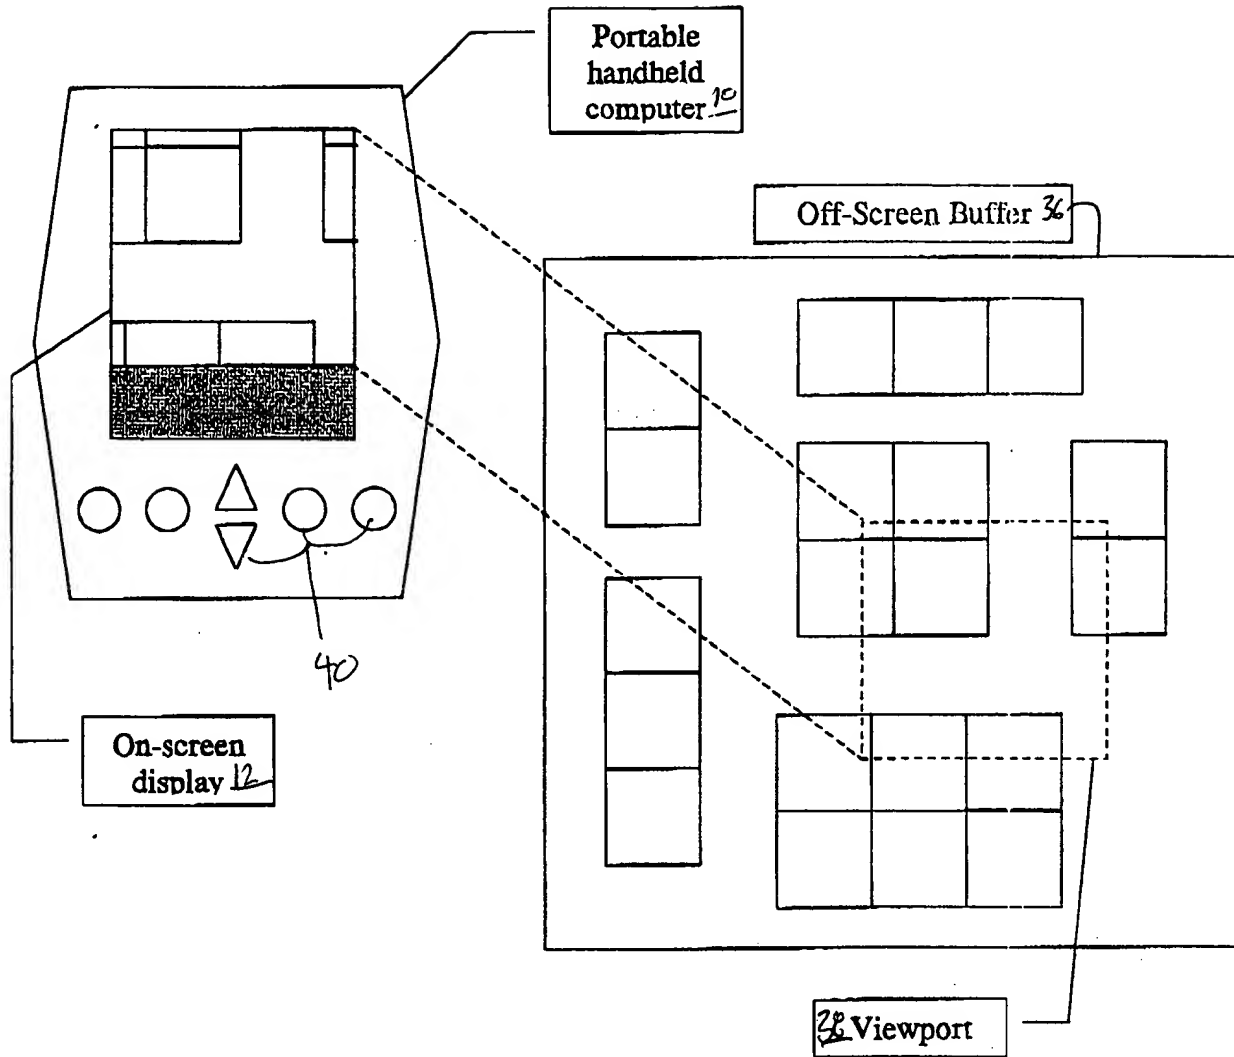

09628506-072800

Figure 6: Editing an Antenna Configuration in 3D

Figure 6a



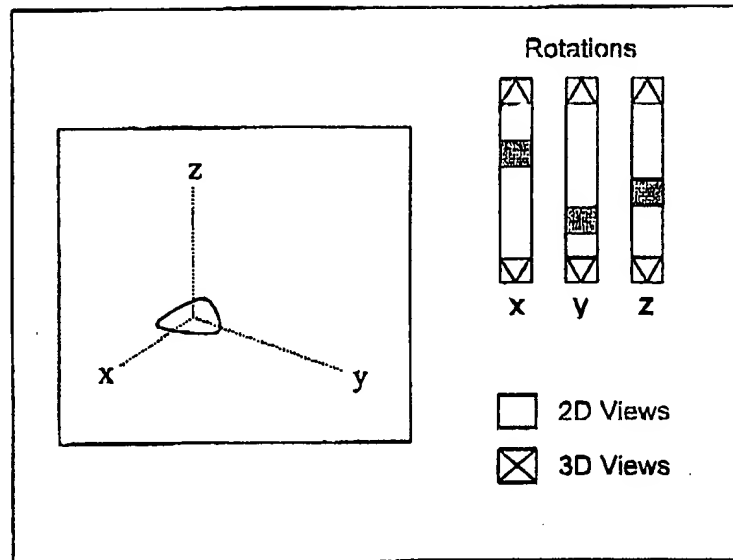


Figure 6b

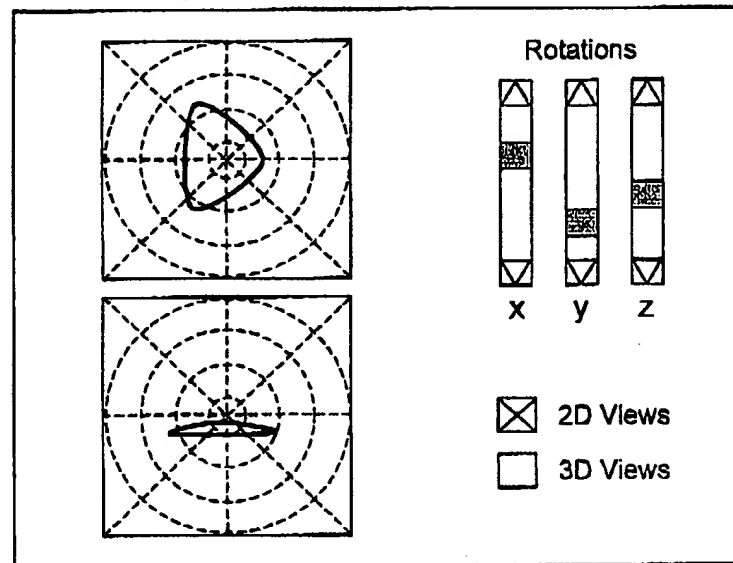


09628506-072800

Figure 7: Translatingan Object

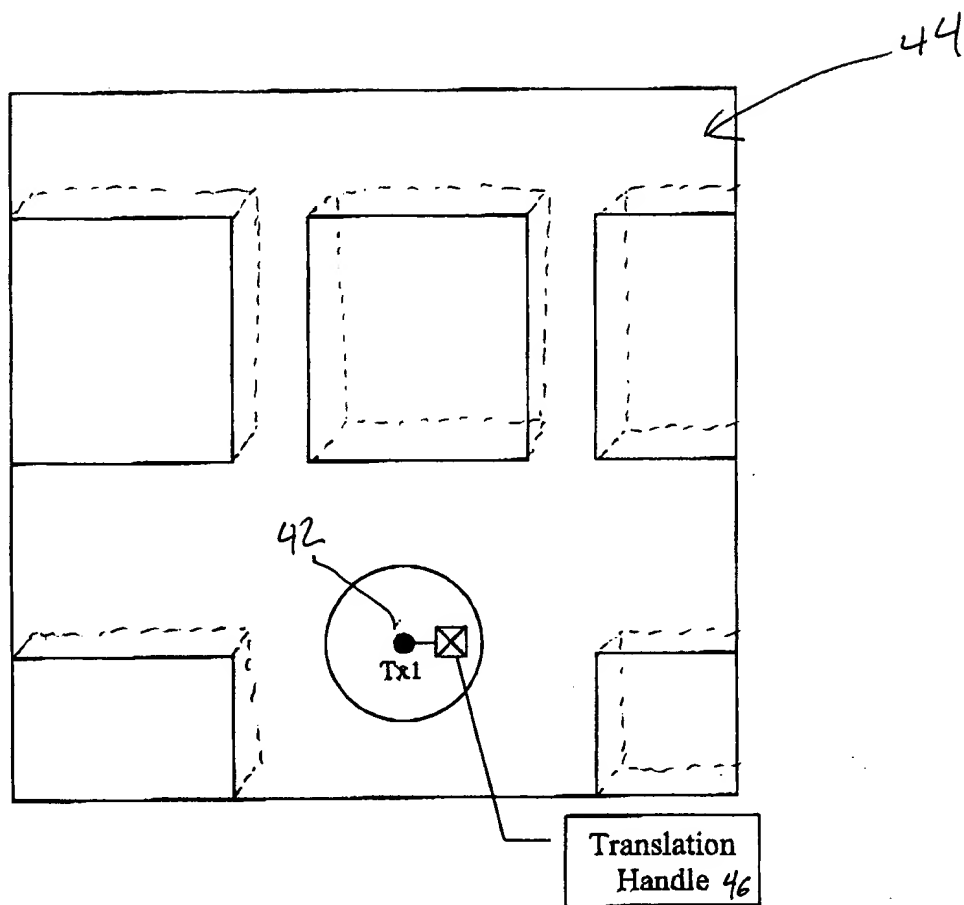

09628506-072800


Figure 8: Altering a Component's Layout

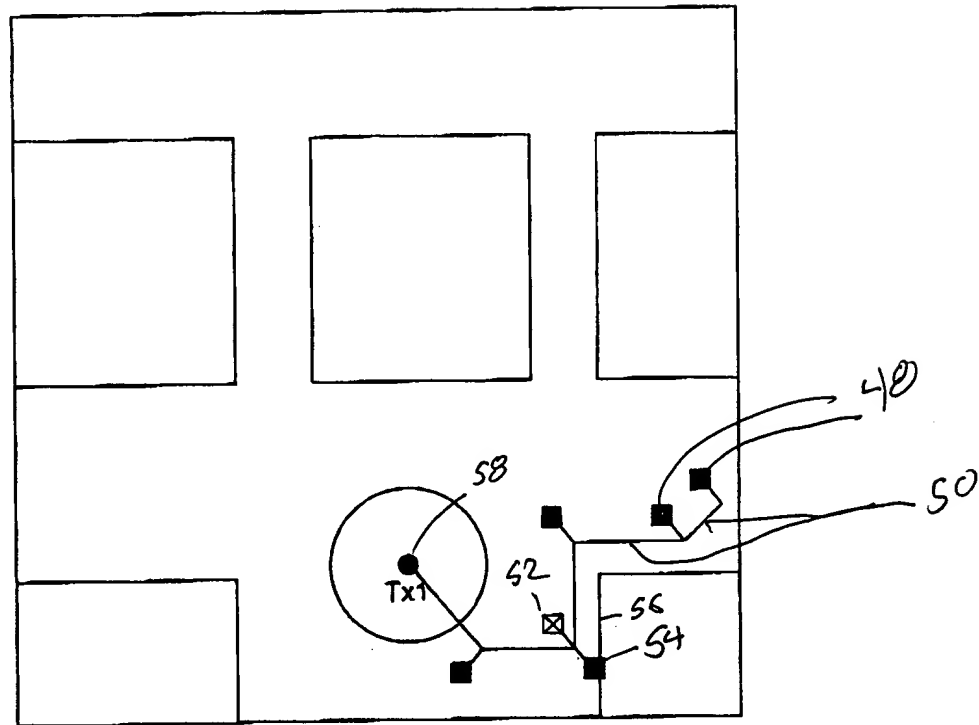

09628506-072800




Figure 9: Portable Handheld Computer to Desktop PC Link

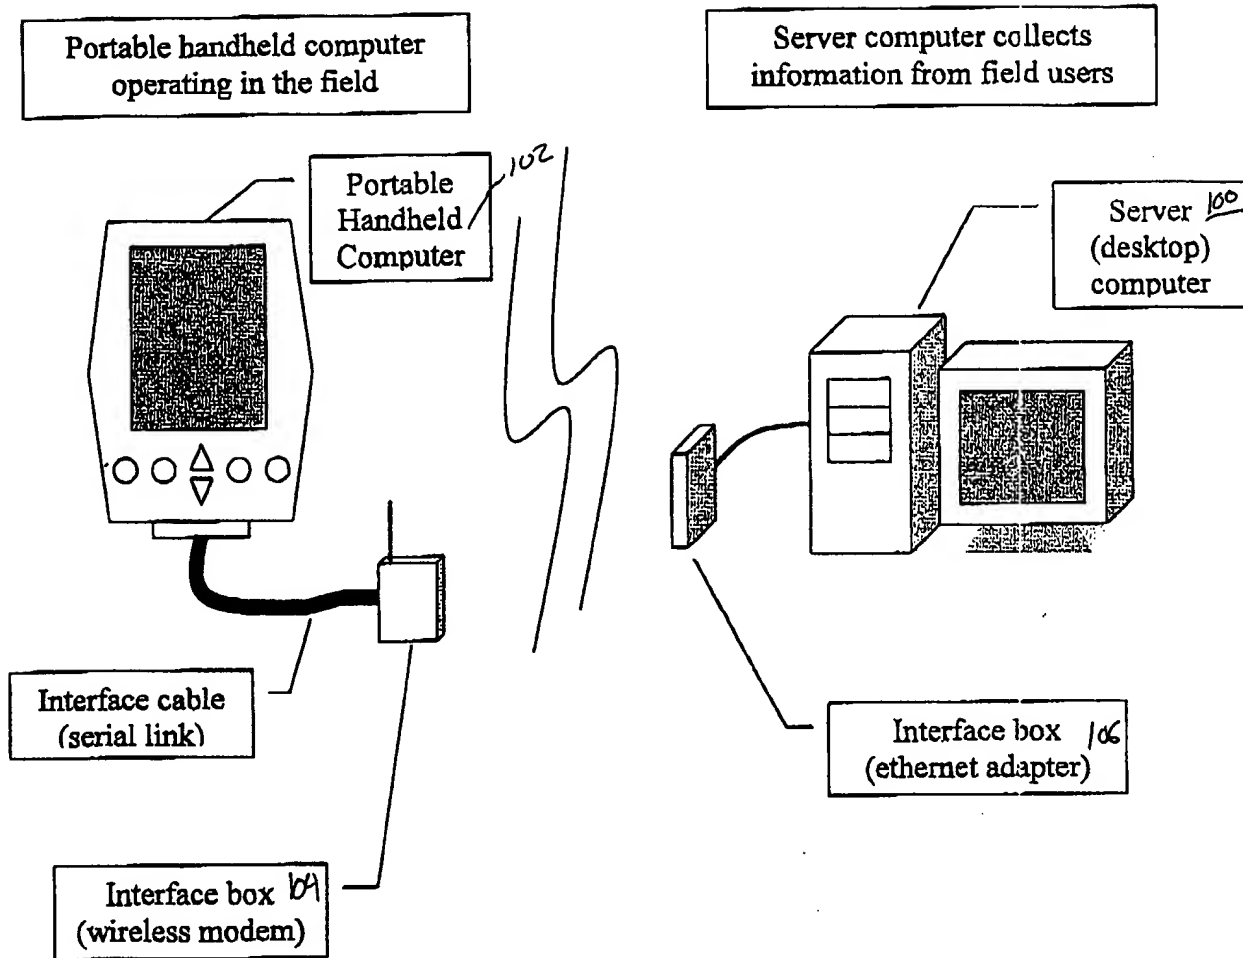

09628506-072800

Figure 10: Portable Handheld Computer Connected to a Measurement Device

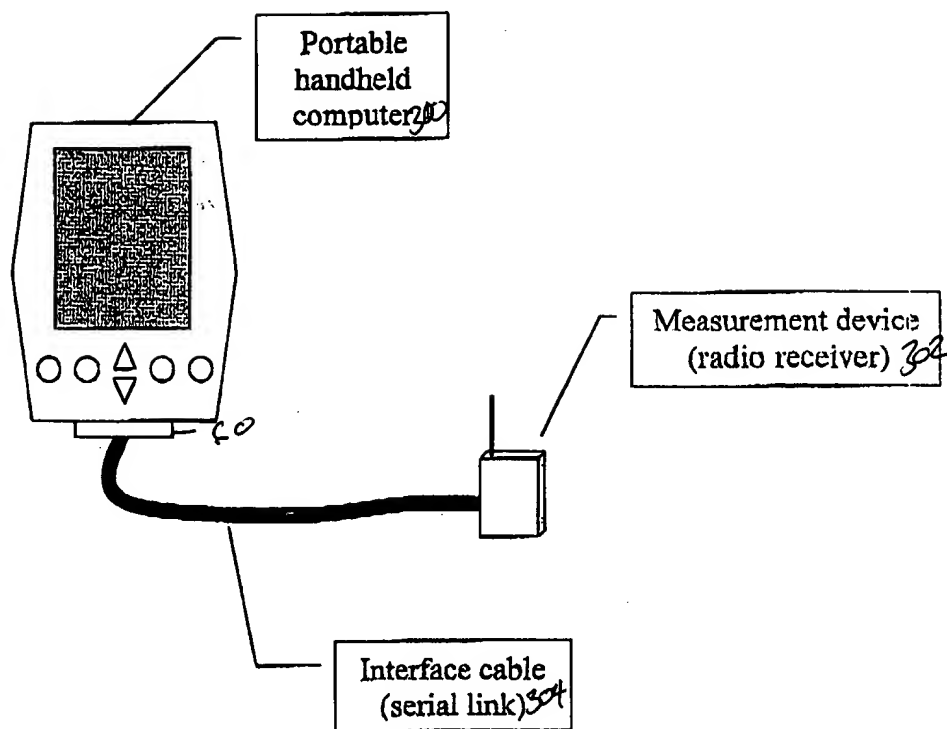

09628506-0712800